

Using the Napco Model 1632, 3200, and 9600

Arming the system to leave:	Arming the system to stay home:	Changing your user code(s):
<ol style="list-style-type: none"> <li>1. Close all the doors, windows, etc.</li> <li>2. Look for a steady <b>green light</b> on the keypad.</li> <li>3. <b>Enter your code, then press “ON/OFF”</b> once.</li> <li>4. The red light should come on, and the keypad will count down your exit time (usually 60 seconds) in 10-second increments.</li> <li>5. Leave by your garage door or your front door. Other doors may set off the alarm once armed.</li> <li>6. If you need more time, disarm the system by entering your code again and pressing the “ON/OFF” button one more time. The green light should reappear. Re-arm the system when you are ready.</li> </ol>	<ol style="list-style-type: none"> <li>1. Close all the doors, windows, etc.</li> <li>2. Look for a steady green light on the keypad.</li> <li>3. Press the <b>“INTERIOR”</b> button to turn off all your motion detectors. If you do not have motion detectors, you may skip this step.</li> <li>4. Press <b>“INSTANT”</b> to cancel the 30-second entry delay on your garage and front doors. This step is optional.</li> <li>5. <b>Enter your code, then press the “ON/OFF”</b> button to arm the system.</li> </ol>	<ol style="list-style-type: none"> <li>1. Go to the keypad by your garage door. This will not work at any other keypad!</li> <li>2. Enter your code, then press the “FUNCTION” key in the upper left corner of your keypad.</li> <li>3. Continue to press “FUNCTION” until you see “ACTIVATE PROGRAMMING Y/N” on your keypad screen.</li> <li>4. Press the “Yes” key (upper right corner) to enter user-programming mode.</li> <li>5. Your keypad should display your first user code “U01”. Note the cursor under the zero.</li> <li>6. If you wish to change your primary user code, press “FUNCTION” to move the cursor over to the display of your current code.</li> <li>7. Type your new code over your current code. If your new code has fewer digits, clear out the old digits by pressing “*”, then “0” for each digit you want to clear. The display will show a dash “-” to signify the digit has been erased.</li> <li>8. <b>Press the “ON/OFF” button to save your new code.</b> The cursor will jump back to the left side of the display to confirm you’ve saved your new code.</li> <li>9. Press “RESET” (lower left corner) to exit user-programming mode.</li> <li>10. Be sure to test your new code immediately!</li> </ol>
<p style="text-align: center;"><b>Controlling “Chimes”</b></p> <p>When you open a door or window, the security system can be set to “beep” for ¾second. This is a good feature for families with children, so they know when the children come and go.</p> <p>Use the “Function” key to display “Activate Chime”. Press “ON/OFF” to Activate the chime function. The same sequence also deactivates chimes.</p>	<p style="text-align: center;"><b>Disarming the System</b></p> <ol style="list-style-type: none"> <li>1. Type in your code, slowly and carefully, then <b>press the “ON/OFF” button.</b></li> </ol>	